


Irrrometer installation detail - Row Crops

NOTE: Irrrometer placement depth is a function of crop root depth.

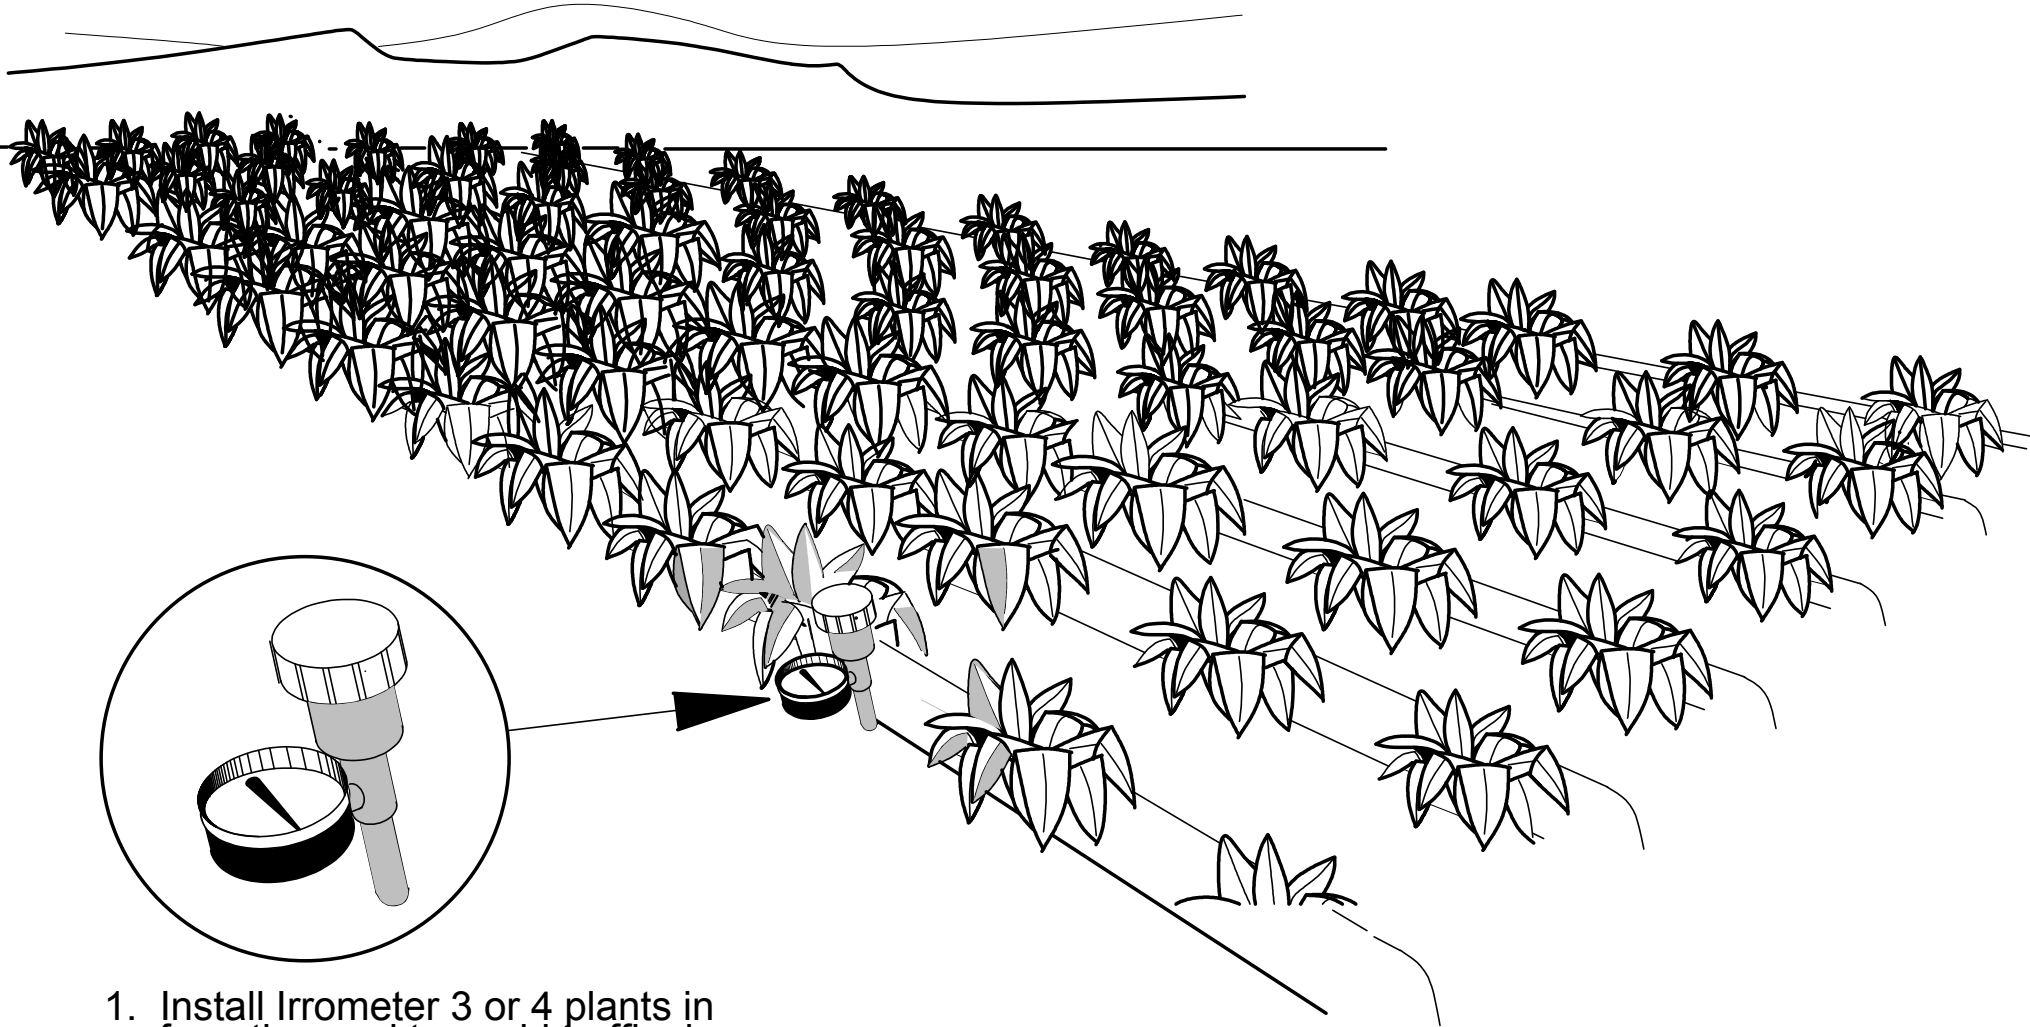

1. Install Irrrometer 3 or 4 plants in from the road to avoid traffic damage.
2. Install instrument at root zone, and in the crop row.
3. On larger irrigation blocks, a monitoring location every 15 to 20 acres is recommended.
4. Use short (shallow) and long (deeper) Irrrometers on 18" or deeper root systems.