


Irrrometer Installation detail - Vines on Jets or Microsprinklers

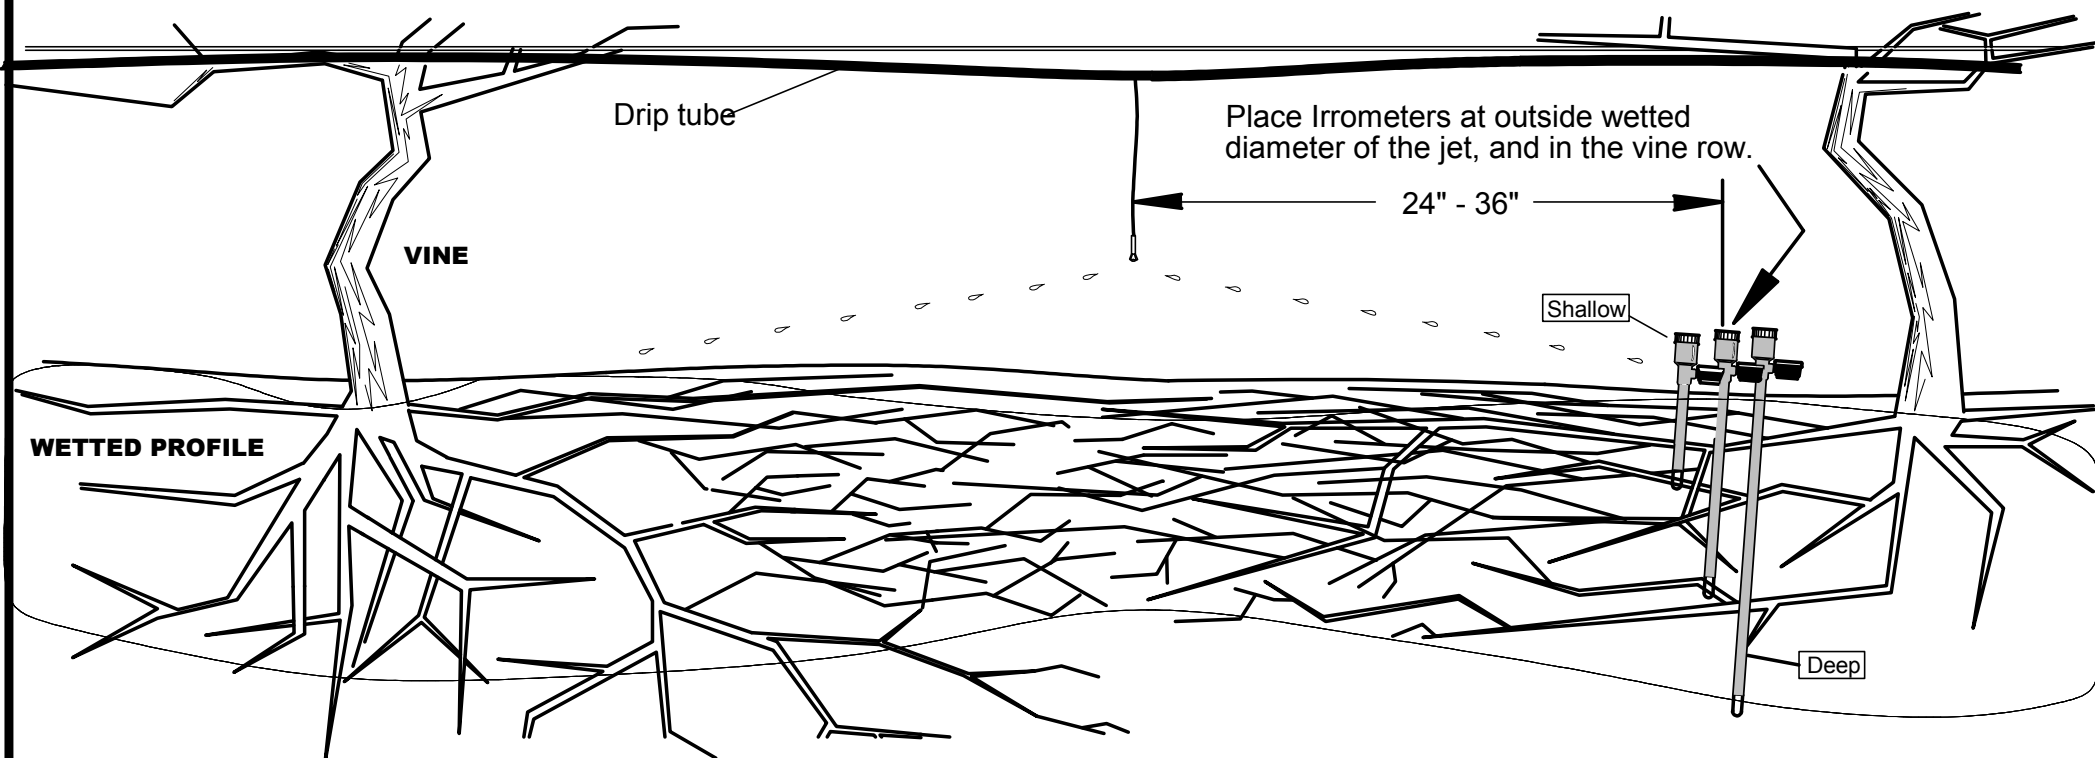

NOTE: Wetted profile could differ from that shown above depending on soil types.

1. Install Irrrometers 3 or 4 vines in from the road to avoid traffic damage.
2. Install instruments in the active root zone in the vine row.
3. On larger irrigation blocks, a monitoring location every 15 to 20 acres is recommended.
4. Use short (shallow) and long (deeper) Irrrometers on 18" or deeper root systems.

NOTE: Irrrometer placement depth is a function of crop root depth.